



**SPECIFICATIONS for SOLO 1000 INDICATOR**

Channels: 1 or 2  
 Input: 1 or 2 350 ohms Load Cell(s)  
 Output: 4-20mA (Source Signal)  
 Increments: 0.1, 0.2, 0.5, 1, 2, 5  
 Display: 2 lines, 6 digits, LCD, .4" character  
 Tare Adjustment: Ten-Turn Knob  
 Operating Temperature: 32-122 degree F, 0-50 degrees C  
 Power: 110-120 VAC, 50/60 Hz (220 VAC 50/60Hz available)  
 Connectors: Power and output: 1/2" nylon conduit connectors  
 Load Cell: 1/2" nylon cord connector  
 Enclosure: NEMA 4X, UL listed, structural foam molded enclosure  
 Accuracy: Overall system accuracy 0.1% - 0.25% full scale.

**MODEL NUMBERS:**

SR1000-1 (1-Channel)  
 SR1000-2 (2-Channel)

**OPTIONS:**

LEVEL ALARM / SET POINTS:  
 1-Channel Model: A maximum of Two (2) sets points  
 2-Channel Model: One (1) set point per channel

**S.3.400**



1150-D Burnett Ave, Concord, CA 94520 USA  
 1-800-893-6723 US & Canada, Fax: 925-686-6713  
 www.forceflow.com / info@forceflow.com

**SOLO 1000**  
**ELECTRONIC INDICATOR**  
**1- or 2-Channel**

Drawn by: SLP/MD  
 Date: 09/01/95  
 Revised: 09/18/03  
 Scale: NONE

Drawing Number  
**30198**